Stanton Wide 6 Drawer Cart

SKU # 0200410120 - DARK CHERRY
SKU # 0200410210 - BLACK
SKU # 0200410410 - WHITE
SKU # 0200410560 - OAK
SKU # 0200410270 - DARK GRAY
SKU # 0200410310 - BLUE

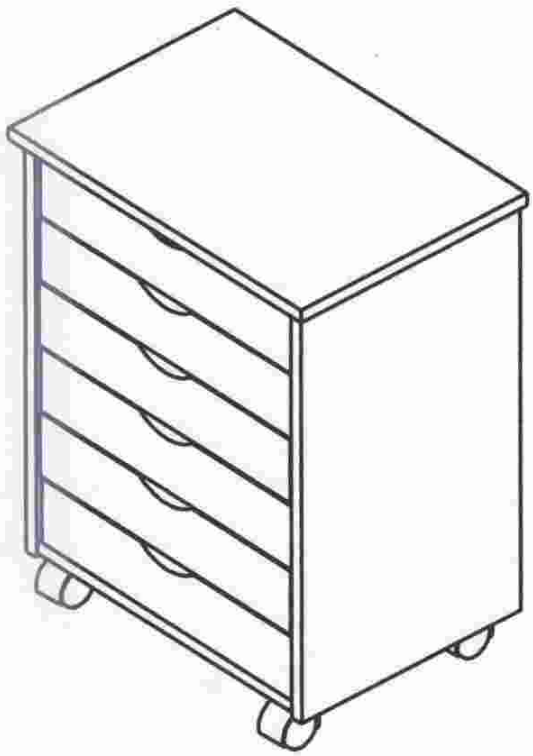

ATTENTION:
- HARDWARE PACK IS IN THE FIRST DRAWER.
- PLEASE ONLY REMOVE THE SHRINK WRAP AFTER THE CASTERS ARE FIXED AND UNIT IS UPRIGHT.

BEFORE BEGINING ASSEMBLY, CHECK TO MAKE SURE ALL PARTS AND HARDWARE ARE ACCOUNTED FOR. IT IS SUGGESTED THAT YOU SAVE THE CARTON AND PACKING MATERIAL UNTIL AFTER ASSEMBLY IS COMPLETED. SELECT A CLEAN, SMOOTH SURFACE TO WORK (SUCH AS A CARPET), FOLLOW THE EASY STEPS BELOW.

***MADE IN THAILAND**

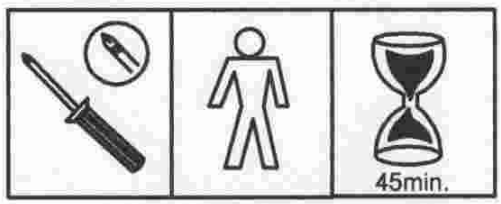

IF PARTS ARE MISSING PLEASE CALL "1-800-240-6047" FOR INFORMATION

A	3/8" x 5/8"	16
B		04

Step 01

Remove top drawer front the cart and make sure you have all hardware as listed in the parts list. Do not put drawer back in at this time. Do not remove plastic shrink wrap yet.

HARDWARE PACK

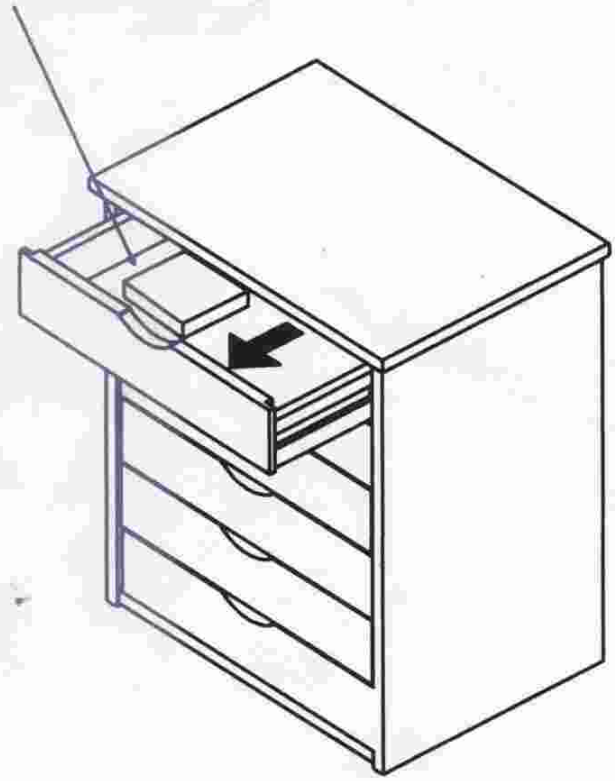

Step 02

Carefully place your Stanton. cart upside down on a clean soft surface. Avoid scratching the top. Using pre drilled holes as your guide, align and attach all four wheels (B) to the bottom of the Stanton Cart as shown using screws (A)

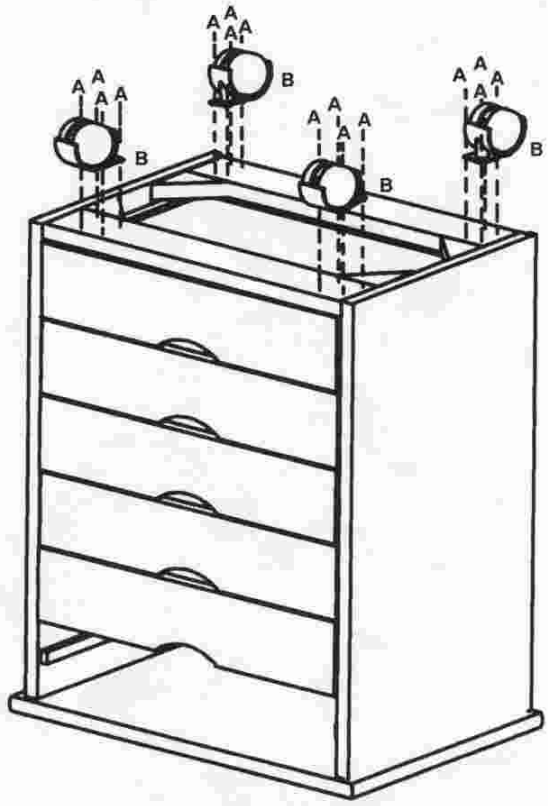

Step 03

Carefully stand unit upright. Insert top drawer. Carefully remove the plastic shrink wrap. If you need to cut the shrink wrap off, do so on the back of the unit, not on the front, sides, or top.